


# GB AWV 450/M / AWV 556/M

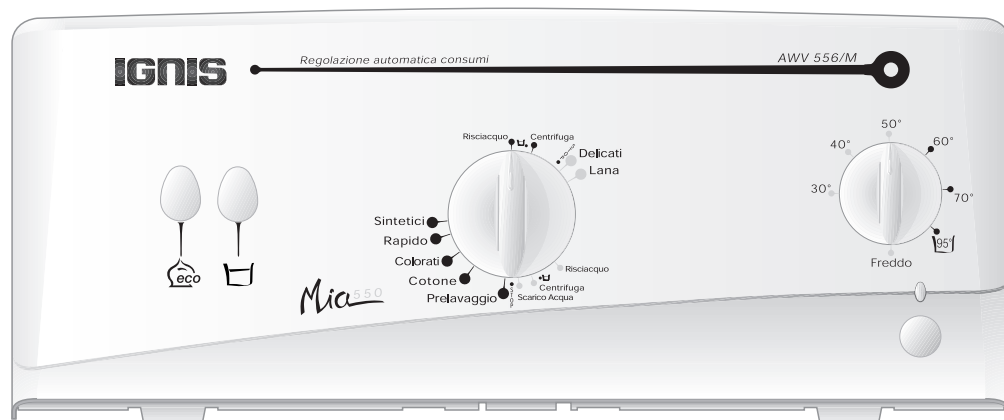

## “Freddo” Cold

Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

\* : option / Yes: dosing required

1) Do not use liquid detergents.

2) Max: 450 rpm for AWV 450/M  
550 rpm for AWV 556/M

Programme	Type of wash / Notes	Max. load kg	Detergents and additives				Options		Temperature Selector °C	Maximum Spin Speed rpm	Programme time approx. min
			Pre-wash	Main Wash	Softener	Bleach	Eco Wash	Rinse Hold			
			I	II	III	IV	eco	W			
Prelavaggio Cotton with Prewash	Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. The maximum load for heavily soiled washing is 3.5 kg.	5.0	Yes <sup>1)</sup>	Yes	*	*	*	*	from Freddo (cold) to 95	Max <sup>2)</sup>	130
Cotone Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.	5.0	— <sup>1)</sup>	Yes	*	*	*	*	from Freddo (cold) to 95	Max <sup>2)</sup>	115
Colorati Coloured	Averagely soiled blouses, shirts etc. made of polyester (Diolen, Trevira); polyamide (Perlon, Nylon), or cotton blends.	2.0	— <sup>1)</sup>	Yes	*	—	—	*	from Freddo (cold) to 60	Max <sup>2)</sup>	100
Rapido Quick Wash	Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled.	5.0	— <sup>1)</sup>	Yes	*	—	—	*	from Freddo (cold) to 40	Max <sup>2)</sup>	85
Sintetici Synthetics	Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	— <sup>1)</sup>	Yes	*	—	—	*	from Freddo (cold) to 40	Max <sup>2)</sup>	70
Risciacquo Rinse + Spin	This programme allows starch or softener to be added. It is followed by an intensive spin cycle.	5.0	— <sup>1)</sup>	—	*	—	—	*	Freddo (cold)	Max <sup>2)</sup>	20
Centrifuga Spin	Programme for intensive spin cycle.	5.0	— <sup>1)</sup>	—	—	—	—	—	—	Max <sup>2)</sup>	15
Delicati Delicate	Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.).	1.5	— <sup>1)</sup>	Yes	*	—	—	*	from Freddo (cold) to 40	Max <sup>2)</sup>	55
Lana Wool	Machine washable woollens with pure new wool label. If the “Rinse Hold” option is selected don't leave the wash to soak for too long.	1.0	— <sup>1)</sup>	Yes	*	—	—	—	from Freddo (cold) to 40	Max <sup>2)</sup>	45
Risciacquo Rinse + Spin	This programme allows starch or softener to be added. It is followed by a gentle spin cycle.	1.5	— <sup>1)</sup>	—	*	—	—	*	Freddo (cold)	Max <sup>2)</sup>	15
Centrifuga Spin	Programme for gentle spin cycle.	1.5	— <sup>1)</sup>	—	—	—	—	—	—	Max <sup>2)</sup>	10
Scarico acqua Drain	Drain only, without spin cycle. Alternative way to end programmes after a “Rinse Hold”.	—	— <sup>1)</sup>	—	—	—	—	—	—	—	5

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

### ENERGY AND WATER CONSUMPTION DATA








Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme time (min)
Cotton	90	5.0	72	1.80	115
Cotton	60	5.0	72	1.15	115
Coloured	60	2.0	66	0.80	100
Coloured	40	2.0	66	0.40	100
Quick Wash	40	2.5	54	0.50	85
Delicate	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The data on the "Energy Label" refer to the programme "Coloured Cotton 60°C".

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

### PREPARATION OF WASH CYCLE

1. Close the drum flaps and check that they are properly locked.
2. Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
  - Programme with pre and main wash 
  - Main wash programme without prewash 
  - Fabric softeners and conditioners 
  - Chlorine bleach 
  - Stain remover agents 
  - Anti-scale agents (if necessary) 
3. Turn the **programme selector knob** clockwise to the desired programme.
4. Turn the **temperature knob**  to the required temperature.


### PRESS ANY DESIRED OPTION BUTTON(S)

#### "Eco Wash" button

- The wash time is extended and the water temperature is reduced.
- This function saves about 30% in energy without compromising the excellent results of the wash.

#### "Rinse Hold" button

- The laundry remains in the last rinse water, without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is especially recommended for the "Synthetics" or "Delicate" programmes.
- This option is perfectly suitable if you wish to postpone the spin or you don't wish to spin the clothes.

**Note:** the programme selector stops on .

### Terminate the "Rinse Hold" option.

- Press the "Rinse Hold" button again; the programme will terminate automatically with the spin cycle corresponding to the previously selected wash programme.
- If you do not wish to spin the clothes, switch off the appliance by pressing the **"On/Off"** button. The pilot light goes out. Turn the programme selector to the "Drain" position and switch on the appliance.

### PROGRAMME START

Open the water inlet tap and press the **"On/Off"** button. The pilot lamp lights up.

### DOOR LOCK

During the running programme, the door cannot be opened.

The door locks automatically in all programmes.

If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

### PROGRAMME END

- The programme selector knob is at "STOP", the pilot lamp lights.
1. Press the **"On/Off"** button. The pilot light goes out.
  2. Cancel the options by pressing the appropriate buttons.
  3. Turn the water supply tap off.
  4. Wait for the door to unlock (about 1 minute).
  5. Open the door and the drum flaps and unload the machine.

### SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the **"On/Off"** button to switch off the appliance. The pilot light goes out.
2. Select the new programme, temperature and options.
3. Press the **"On/Off"** button to switch on the appliance. The pilot light lights.

### TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the **"On/Off"** button to switch off the appliance. The pilot light goes out.
2. Set the programme selector on "Drain".
3. Press the **"On/Off"** button to start the "Drain" programme. Only open the door when the programme selector is at "STOP" and the door is unlocked (after approximately 1 minute).

### NOTES AND INDICATIONS FOR USE

- After switching your washing machine on, it does not start immediately: it needs some seconds in order to lock the door, fill water and then drum starts turning.
- Spinning has an interrupted start-up: the drum starts and stops running several times, to improve spin efficiency and to better balance the laundry.
- At the end of the spinning cycle the drum goes on reversing for some minutes: this helps you unloading the laundry.
- Do not exceed in detergents dosage: excessive foam formation may prevent spinning.
- The turning of the drum is stopped in several steps of the washing cycle due to optimization of energy consumption.